

- A = Mounting point at distributor (for viewing indicator and electrical functionality check)
- B = Mounting point for viewing indicator at distributor (if point A is occupied)
- D = Proportioning block DPA-B
- H = Main line
- K = Proportioning volume distinctive number
- R = Connecting plate APA-B
- S = mid fastening screw

	Number of outlets	Length "a"	Length "s"	Weight [kg]
6 8		97	-	0,50
		114	- 0,65	
	10	131	-	0,80
12 14		153	68 0,98	
		170	85	1,10
	16	187	85	1,25
18		204	102	1,40
	20	221	102	1,55

Progressive distributor VPA-B



Use:

In progressive mode based central lubrication systems.

The main features of **WOERNER**-progressive distributors are as follows:

- Accurate proportioning volumes.
- Clear and precise arrangement of control channels in spite of small-size construction
- Modular system construction.
 Quick fault remedy possible without having to loosen the pipeline.
- 3 different proportioning volumes selectable in accordance with the lubricant required.
- Extremely long service life due to refined sliding surfaces.
- Pluggable monitoring elements can be replaced during operation.
- No proportioning decrease at the piston monitored.

Technical data:

Proportioning volume

per cycle: 0,09 ... 0,2 cm³

Lubrication point

connections at max.: 20
Operating pressure at max.: 150 bar

Throughput volume in case of:

Oil at max.: 700 cm³/min Grease at max.: 70 cm³/min

Delivery medium:

Oil-viscosity: >6 cP Grease up to: NLGI-category 2

Material:

Proportioning block: Aluminium Internal parts: Steel Connecting plate: Aluminium

Temperature range: -20 ... +80 °C

Mounting position: usually as needed Note: In case of heavy vibration or shock load, install the distributor such that piston axes are situated vertically to the main direction of shock impact.

An optimum ventilation of the whole lubrication system is the precondition for its functionally safe operation.

For quicker ventilation, the flow direction from bottom to top in the distributor is of advantage (inlet on bottom side).


The distributor must not be "distorted". Therefore when mounting it, always be careful that the supporting surface is level.

Leaflet-No. 068 Replaces No. 068

0687.01.07 EN 0687.11.06 EN

Page 1 of 6



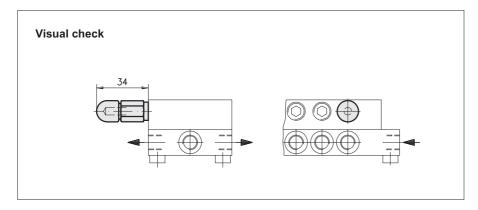


Functional checks:

Visual check:

In a translucent polyamide casing, a red pin being fixed to the piston shows the piston's movement.

Casing material: Polyamide, translucent
Ambient temperature: -10 ... +80 °C
Weight: 0,35 kg
Mounting point at distributor: A or B

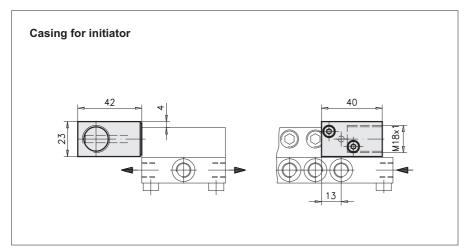

Electrical check with initiator:

Casing for initiator:

A pin being connected with the piston attenuates an initiator once per cycle.

Version "D":

Casing material: Polyamide, translucent

(Piston movement is visible)

for initiators with a switching

distance of: ≥8 mm

Version "W":

Casing material: Polyamide, black

for initiators with a switching

distance of: ≥5 mm

Use initiator with M18x1 thread! (When using other initiators than those depicted below, such initiators must be checked for suitability.)


Choice of initiators:

Designation / Purchase-no.	Initiator "C" 913.900-03	Initiator "F" 913.900-11	Initiator "N" 913.900-21	Initiator "I" 913.900-14	Initiator "2" 979.044-88	
Suits for	Casing "W" Switching dis.≥5mm	Casing "D" and "W" Switching dis.≥8mm	Casing "D" and "W" Switching dis.≥8mm	Casing "W" Switching dis.≥5mm	Casing "W" Switching dis.≥5mm	
Dimension drawing:	A A A A A A A A A A A A A A A A A A A	W24 LED	SW24 4 LED			
Connection diagram:	BN L+ BK 0 BU L-	I BK BU	1 + 4 + 1 + 1 + 1 + 1 + 1 + 1 + 1 + 1 +	1 + + + + + + + + + + + + + + + + + + +	1 + 4 + NO 3	
Operating voltage:	10 30 VDC	20 250 VUC	10 30 VDC	10 30 VDC	10 30 VDC	
Residual ripple:	≤ 10%		≤ 15%	≤ 15%	≤ 15%	
Load current at max.:	250 mA	500 mA	130 mA	200 mA	130 mA	
Protection system:	IP67	IP67	IP67	IP67	IP67	
Power connection:	Cable 3 m	Cable 3 m	Unit plug (see accessoires page 3)			
Length "A":	60 mm	62 mm	45 mm	83 mm	65 mm	

Leaflet-No. 0687 EN

Page 2 of 6



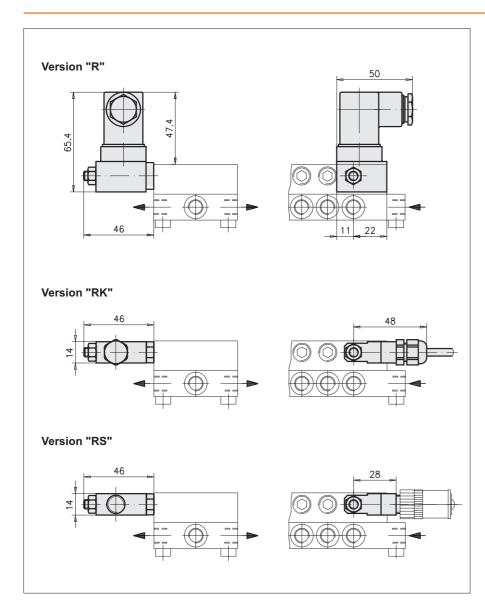

Electrical check with reed contact:

A magnet connected with the piston switches the reed contact once per cycle.

Switching voltage: 10 ... 36 VUC
Switching current at max.: 25 mA
Switching power at max.: 0,9 VA
Ambient temperature: -5 ... +80 °C
Mounting pointat distributor: A

Version "R" with plug-in connection DIN 43650A:

Material (casing): Al or 1.4305 System of protection: IP65



Version "RK" with cable:

Material (casing): PA or 1.4305 System of protection: IP65

Cable

Length: 10 m Cross section: 2x0,75 mm² Material: Oilflex

Connection 100 R diagram: BN BU

Version "RS" with unit plug 4 pin (M12):


(for matching cable jack see accessories)


Material (casing): PA or 1.4305

Connection 100 R diagram:

Accessories:

Cable jack for functionality check "RS" and initiator (state purchase-no., please)

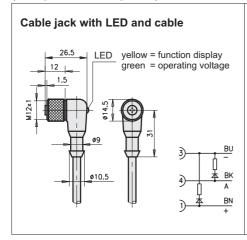

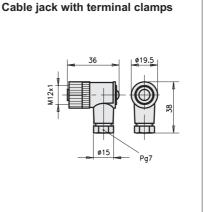

Cable jack with LED and cable:

Purchase-no.: 913.404-19
Operating voltage: 10 ... 30 VDC

Cable

Cross section: 3x0,34 mm²
Length: 5 m
System of protection: IP68

Cable jack with terminal clamps: (without LED)

Purchase-no.:

Connection type:

Connection cross section:

Cable diameter:

System of protection:

913.404-24

Screws

4 ... 6 mm


IP67


EUGEN WOERNER GmbH & Co. KG
Postfach 1661 DE-97866 Wertheim
Am Eichamt 8 DE-97877 Wertheim
Tel. +49 (0) 9342 803-0 info@woerner.de
Fax.+49 (0) 9342 803-202 www.woerner.de

Leaflet-No. 0687 EN

Page 3 of 6



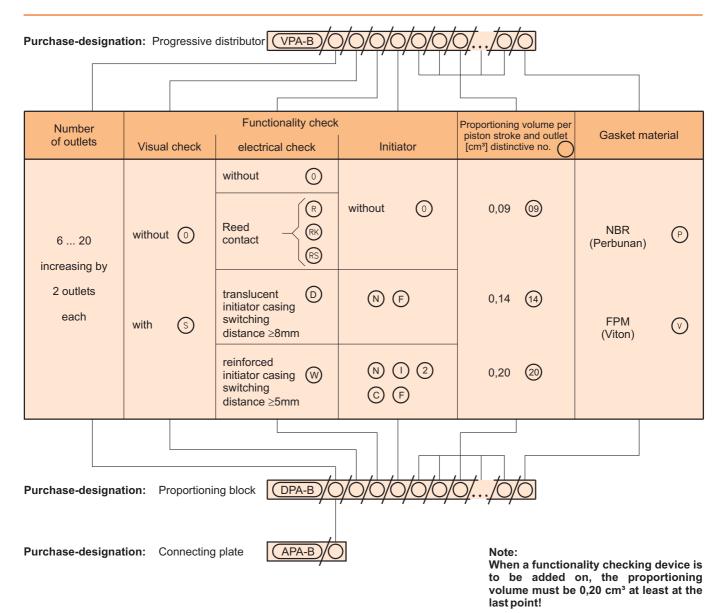

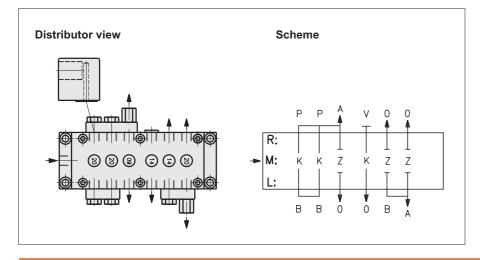

Purchase-example:

(for the distributor as depicted here)

Progressive distributor with 12 outlets, without visual check "0", with receptacle for initiator "W" and initiator "C", proportioning distinctive numbers "20", "20", "09", "14", "14", "20", gasket material "P".

Purchase-designation:

VPA-B / 12 / 0 / W / C / 20 / 20 / 09 / 14 /

14 / 20 / P

R : P P A V 0 0 M : K K Z K Z Z L : B B 0 0 B A

EUGEN WOERNER GmbH & Co. KG
Postfach 1661 DE-97866 Wertheim
Am Eichamt 8 DE-97877 Wertheim
Tel. +49 (0) 9342 803-0 info@woerner.de
Fax.+49 (0) 9342 803-202 www.woerner.de


Leaflet-No. 0687 EN


Page 4 of 6



Combination of outlets, doubling the proportioning volume at an outlet:

Connect opposing outlets by removing the "Z" screw. Close the not needed outlet with the lock screw. Without removal of the "Z" screw, no outlet must be locked.

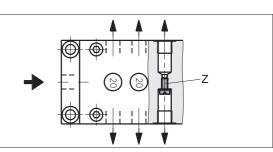

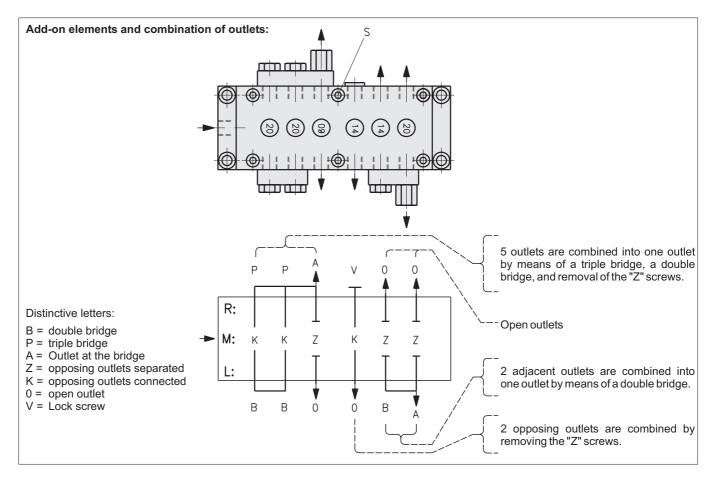

Accessories:

Pipe screw fittings DIN 2353: (please state purchase-no.)

Connection		Pipe screw fitting with pipe-outer∅				Check valve with pipe-outer∅			
thread	4	6	8	10	12	4	6	8	
G1/8	951.100-04	951.100-05	951.100-06	-	-	501.060-65	501.065-65	501.070-65	

Bridges and lock screw: (please state purchase-no.)


	(1		,					
Bridges			Bridge	Bridges (location of the mid fastening screw "S")			Lock screw	
double without	. P	double with		double without		double with	triple with	"V"
outlet (B-B)	outlet (P-P-P)	outlet (B-A)	outlet (P-P-A)	outlet (B-B)	outlet (P-P-P)	outlet (B-A)	outlet (P-P-A)	
205.280-65	205.285-65	205.290-65	205.295-65	205.240-65	205.287-65	205.250-65	205.296-65	179.015-65
Position of the mid fastening screw "S"								

EUGEN WOERNER GmbH & Co. KG
Postfach 1661 DE-97866 Wertheim
Am Eichamt 8 DE-97877 Wertheim
Tel. +49 (0) 9342 803-0 info@woerner.de
Fax.+49 (0) 9342 803-202 www.woerner.de

Leaflet-No. 0687 EN

Page 5 of 6



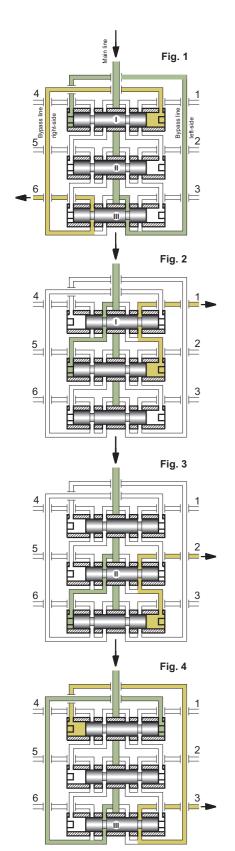

Functional process figures 1 ... 4:

The lubricant flows from the main line through the right-side ring groove of piston III as well as the bypass line (right) and to the left side of piston I and moves it into its home position. The lubricant displaced by piston I is ejected via the left bypass line through outlet no. 6.

After shifting of piston I, lubricant flows to the left side of piston II and pushes it into its right-side home position. The displaced lubricant is ejected via outlet no. 1.

After shifting of piston II, lubricant flows to the left side of piston III and pushes it into its right-side home position. The displaced lubricant is ejected via outlet no. 2.

After shifting of piston III, lubricant flows to the right side of piston I and pushes it into its left-side home position. The displaced lubricant is ejected via outlet no. 3. The continuation of that process is evidenced in the scheme depicted.

Monitoring of progressive distributors:

As for instance due to soiling, the flow through a lubricant point line may be prevented. This will cause a piston to get blocked. By virtue of the forced control as depicted in figures 1 up to 4, the other pistons will be stopped as well.

Due to this configuration, the proportioning at all outlets of the distributor can be monitored by means of a sensor at one piston only.

Mounting note:

The pistons are provided with an extremely small fitting clearance. Therefore, the pistons, after the dismantling of a distributor, must never be interchanged.

Formula for calculating the lubricant available per lubrication point:

A progressive distributor allocates the delivered lubricant to the individual lubrication points in forced order. Due to the functional process as described herein, a safe proportioning is ensured.

The lubricant q_i delivered to a lubrication point i can be calculated as follows

$$q_i = \frac{K_i}{2*(K_1 + K_2 + K_3...)}*Q$$

Q = lubricant delivered to the distributor,

K_i = distinctive number of the outlet i