

- A = Mounting point at distributor (for viewing indicator and electrical functionality check)
- B = Mounting point for viewing indicator at distributor (if point A is occupied)
- D = DPA-D proportioning block
- H = Main line
- K = Proportioning volume distinctive number
- M = 2 M8 fastening threads for mounting of auxiliary units (for example, see data sheet 0684)
- R = APA-D connecting plate S = Mid fastening screw

Progressive distributor VPA-D 205.600

Number Length Length Weight [kg] of outlets 's 3,00 6 166 -8 199 -3,70 10 232 4,40 _ 12 270 116 5.10 14 303 149 5,80 16 340 149 6,50 18 373 182 7,20 20 406 182 7,90

Progressive distributor VPA-D



Use:

In progressive mode based central lubrication systems.

The main features of **WOERNER** progressive distributors are as follows:

- Accurate proportioning volumes.
- Clear and precise arrangement of control channels in spite of small-size construction.
- Modular system construction. Quick fault remedy possible without having to loosen the pipeline.
- 4 different proportioning volumes selectable in accordance with the lubricant required.
- Extremely long service life due to refined sliding surfaces.
- Pluggable monitoring elements can be replaced during operation.
- No proportioning decrease at the piston monitored.

Technical data:

| Proportioning volume per cycle: | 0,93,7 cm ³ |
|---|--|
| Lubrication point connections | satmax.: 20 |
| Operating pressure at max.: | 150 bar |
| Throughput volume: Oil at max.: Grease at max.: | 6000 cm³/min 600 cm³/min |
| Delivery medium: Oil viscosity: Grease: up to N | >6 cP LGI category 2 |
| Material: Proportioning block: Internal parts: Connecting plate: | Aluminium Steel Aluminium |
| Temperature range: | -20 +80 °C |
| Mounting position: usu Note: In case of heav shock load, install the d that piston axes are situat the main direction of shoc An optimum ventilation lubrication system is the for its functionally of a posi- | istributor such ted vertically to ck impact. of the whole e precondition |


for its functionally safe operation. For quicker ventilation, the flow direction from bottom to top in the distributor is of advantage (inlet on bottom side). The distributor must not be "distorted".


Therefore, when mounting it, always be careful that the supporting surface is level.

EUGEN WOERNERGmbH & Co. KGPostfach 1661DE-97866Am Eichamt 8DE-97877Tel. +49 (0) 9342 803-0info@woerner.deFax.+49 (0) 9342 803-202www.woerner.de

Leaflet-No. 0689.01.07 EN Replaces No. 0689.12.06 EN Page 1 of 6



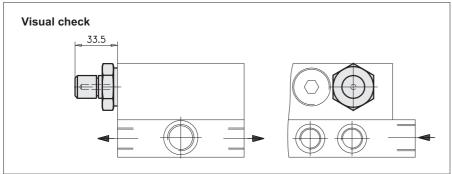

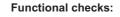

Visual check:

In a translucent polyamide casing, a red pin being fixed to the piston shows the piston's movement.

| Casing material: | Polyamid | le, trai | nslucent |
|---------------------|-------------|----------|----------|
| Ambient temperatu | ire: | -10. | +80 °C |
| Weight: | | | 0,35 kg |
| Mounting point at d | istributor: | | AorB |

Electrical check with initiator:

Casing for initiator:

A pin being connected with the piston attenuates an initiator once per cycle.


Version "D":

| Casing material: | Polyamide, trar | slucent |
|-----------------------|------------------|----------|
| (Pis | ston movement is | visible) |
| for initiators with a | a | |
| switching dista | ance of: | ≥8 mm |

Version "W":

| Casing material: | Polyamide, black |
|-----------------------|------------------|
| for initiators with a | |
| switching distance of | : ≥5 mm |

Use initiator with M18x1 thread! (When using other initiators than those depicted below, such initiators must be checked for suitability.)

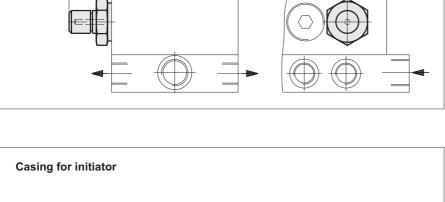

Choice of initiators:

58

10.5

M18x1

49


| Designation / Purchase-no. | Initiator "C" 913.900-03 | Initiator "F" 913.900-11 | Initiator "N" 913.900-21 | Initiator "I" 913.900-14 | Initiator "2" 979.044-88 | |
|-------------------------------|--------------------------------------|--|--|--------------------------------------|--------------------------------------|--|
| Suits for | Casing "W" Switching distance≥5mm | Casing "D" und "W" Switching distance≥8mm | Casing "D" und "W" Switching distance≥8mm | Casing "W" Switching distance≥5mm | Casing "W" Switching distance≥5mn | |
| Dimension drawing: | | W24 LED | | | | |
| Connection diagram: | BN L+ BK NO BU L- | I ВК ВИ ВИ ВU ВU ВU ВU | | | | |
| Operating voltage: | 10 30 VDC | 20 250 VUC | 10 30 VDC | 10 30 VDC | 10 30 VDC | |
| Residual ripple: | ≤ 10% | | ≤ 15% | ≤ 15% | ≤ 15% | |
| Load current at max.: | 250 mA | 500 mA | 130 mA | 200 mA | 130 mA | |
| Protection system: | IP67 | IP67 | IP67 | IP67 | IP67 | |
| Power connection: | Cable 3 m | Cable 3 m | Unit plu | ug (see accessories p | bage 3) | |
| Length "A": | 60 mm | 62 mm | 45 mm | 83 mm | 65 mm | |

40

EUGEN WOERNER Leaflet-No. GmbH & Co. KG Postfach 1661 DE-97866 Wertheim Page 2 of 6 DE-97877 Wertheim Am Eichamt 8 Tel. +49 (0) 9342 803-0 info@woerner.de Fax.+49 (0) 9342 803-202 www.woerner.de


0689 EN



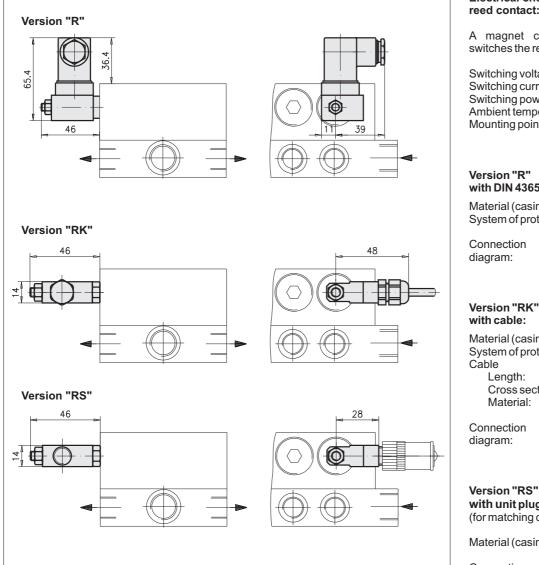


Accessories:

Cable jack for functionality check "RS" and initiator (state purchase-no., please)

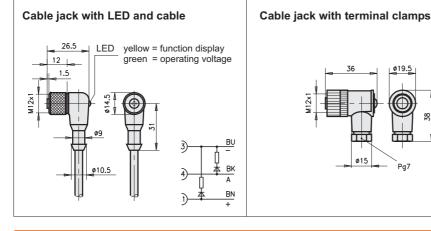



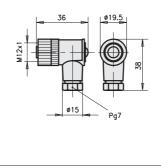

EUGEN WOERNER GmbH & Co. KG DE-97866 Wertheim Postfach 1661 Am Eichamt 8 DE-97877 Wertheim Tel. +49 (0) 9342 803-0 info@woerner.de Fax.+49 (0) 9342 803-202 www.woerner.de

Electrical check with reed contact:

A magnet connected with the piston switches the reed contact once per cycle.

| Switching voltage: | 10 36 VUC |
|--------------------------------|-----------|
| Switching current at max.: | 25 mA |
| Switching power at max.: | 0,9 VA |
| Ambient temperature: | -5 +80 °C |
| Mounting point at distributor: | A |

with DIN 43650A plug-in connection:

| Material (casing): System of protection: | Al or. 1.4305 IP65 |
|---|-----------------------|
| Connection diagram: 1 | |
| | 3 |

| Material (casing): System of protect Cable | | PA or 1.4305 IP65 |
|--|-------|-------------------------------|
| Length: Cross section Material: | 1: | 10 m 2x0,75 mm² Oelflex |
| Connection diagram: | BN —— | 100 R |

Version "RS" with unit plug, 4-pin (M12): (for matching cable jack see accessories)

| Material (casing): | PA or 1.4305 |
|---------------------|----------------|
| Connection diagram: | 100 R 1 - 4 |

Cable jack with LED and cable:

| Purchase-no.: | 913.404-19 |
|-----------------------|------------------------|
| Operating voltage: | 10 30 VDC |
| Cable | |
| Cross section: | 3x0,34 mm ² |
| Length: | 5 m |
| System of protection: | IP68 |


Cable jack with terminal clamps: (without LED)


| Purchase-no.: | 913.404-24 |
|---------------------------|---------------------------|
| Connection type: | Screws |
| Connection cross section: | max. 0,75 mm ² |
| Cable diameter: | 4 6 mm |
| System of protection: | IP67 |

Leaflet-No. Page 3 of 6

0689 EN



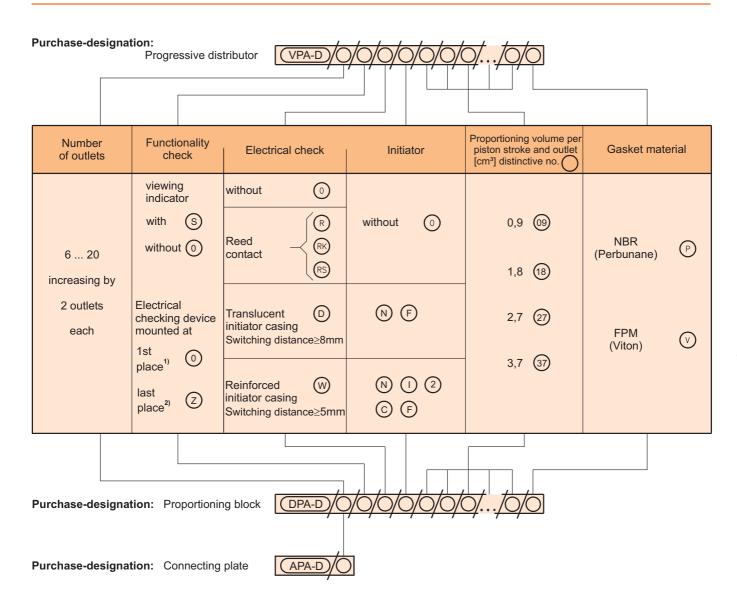

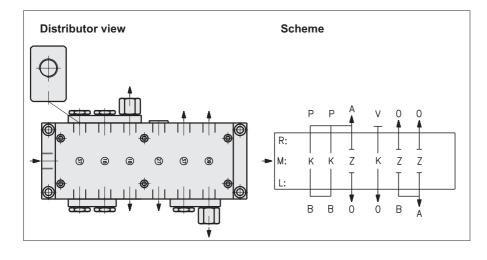

Purchase-example: (for the distributor as depicted here)

Progressive distributor with 12 outlets, without visual check "0", with receptacle for initiator "W" with initiator "C", proportioning distinctive numbers "37", "18", "18", "27", "37", "09", gasket material "P".

Purchase-designation:

VPA-D/12/0/W/C/37/18/18/27/ 37/09/P R: P P A V 0 0 M: K K Z K Z Z L: B B 0 0 B A

EUGEN WOERNERGmbH & Co. KGPostfach 1661DE-97866Am Eichamt 8DE-97877Tel. +49 (0) 9342 803-0info@woerner.deFax.+49 (0) 9342 803-202www.woerner.de

0689 EN

Page 4 of 6

Leaflet-No.



Combination of outlets, doubling the proportioning volume at an outlet: \odot Connect opposing outlets by removing the "Z" screw. Close the not needed outlet with the lock screw. .7 6 ା Without removal of the "Z" screw, no outlet must be locked. Add-on elements and combination of outlets: 5 outlets are combined into one outlet by means of a triple bridge, a double bridge, and removal of the "Z" screws. Distinctive letters: R: Open outlets B = double bridge M: P = triple bridge Κ 7 Ζ Ζ K A = Outlet at the bridge 2 adjacent outlets are combined into L: Z = opposing outlets separated one outlet by means of a double K = opposing outlets connected bridge. 0 = open outlet В В Ċ B V = Lock screw 2 opposing outlets are combined by removing the "Z" screws.

Accessories:

Pipe screw fittings DIN 2363: (please state purchase-no.)

| Connection | Pipe screw fitting with pipe outer diameter | | | | Check valve with pipe outer diameter | | | |
|------------|---|------------|------------|------------|--------------------------------------|----|------------|----|
| thread | 8 | 10 | 12 | 15 | 18 | 10 | 12 | 15 |
| G3/8 | 951.100-13 | 951.100-15 | 951.100-16 | 951.100-25 | 951.100-24 | - | 952.800-04 | - |
| G1/2 | - | 951.101-34 | 951.100-72 | 951.100-18 | 951.100-19 | - | - | - |

Bridges and lock screw: (please state purchase-no.)

| Bridges | | | | Bridges (location of the mid fastening screw "S") | | | | Lock screw |
|----------------------------------|-------------------------------|--------------------------|----------------------------|---|-------------------------------|--------------------------|----------------------------|------------|
| double without outlet (B-B) | triple without outlet (P-P-P) | double with outlet (B-A) | triple with outlet (P-P-A) | double without outlet (B-B) | triple without outlet (P-P-P) | double with outlet (B-A) | triple with outlet (P-P-A) | "V" |
| 205.645-65 | 205.635-65 | 205.690-65 | 205.695-65 | 205.643-65 | 205.634-65 | 205.692-65 | 205.692-65 | 205.688-65 |
| Mid fastening screw position "S" | | | | | | | | |


EUGEN WOERNER GmbH & Co. KG Postfach 1661 DE-97866 Wertheim Am Eichamt 8 DE-97877 Wertheim Tel. +49 (0) 9342 803-0 info@woerner.de Fax.+49 (0) 9342 803-202 www.woerner.de 0689 EN

Page 5 of 6

Leaflet-No.

- Subject to modifications -



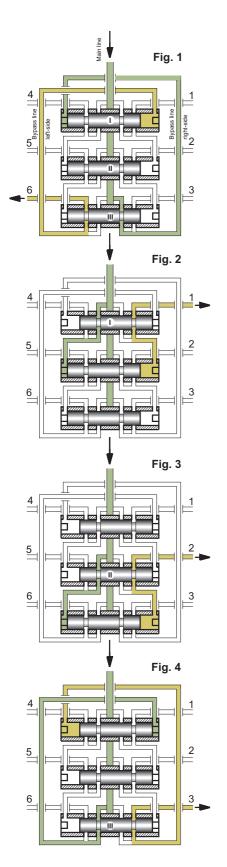

Functional process fig. 1 ... 4:

The lubricant flows from the main line through the right-side ring groove of piston III as well as the bypass line (right) and to the left side of piston I and moves it into its home position. The lubricant displaced by piston I is ejected via the left bypass line through outlet no. 6.

After shifting of piston I, lubricant flows to the left side of piston II and pushes it into its right-side home position. The displaced lubricant is ejected via outlet no. 1.

Monitoring of progressive distributors:

As for instance due to soiling, the flow through a lubricant point line may be prevented. This will cause a piston to get blocked. By virtue of the forced control as depicted in figures 1 up to 4, the other pistons will be stopped as well.

Due to this configuration, the proportioning at all outlets of the distributor can be monitored by means of a sensor at one piston only.

Mounting note:

The pistons are provided with an extremely small fitting clearance. Therefore, the pistons, after the dismantling of a distributor, must never be interchanged.

After shifting of piston II, lubricant flows to the left side of piston III and pushes it into its right-side home position. The displaced

After shifting of piston III, lubricant flows to the right side of piston I and pushes it into its left-side home position. The displaced lubricant is elected via outlet no. 3. The continuation of that process is evidenced in

the scheme depicted.

lubricant is ejected via outlet no. 2.

The lubricant qi delivered to a lubrication point i can be calculated as follows

Formula for calculating the lubricant

A progressive distributor allocates the

delivered lubricant to the individual lubri-

cation points in forced order. Due to the

functional process as described herein, a

available per lubrication point

safe proportioning is ensured.

$$q_i = \frac{K_i}{2*(K_1 + K_2 + K_3...)} * Q$$

Q = lubricant delivered to the distributor.

K_i = distinctive number of the outlet i

Subject to modifications -

EUGEN WOERNER Leaflet-No. GmbH & Co. KG DE-97866 Wertheim Postfach 1661 Page 6 of 6 Am Eichamt 8 DE-97877 Wertheim Tel. +49 (0) 9342 803-0 info@woerner.de Fax.+49 (0) 9342 803-202 www.woerner.de

0689 EN